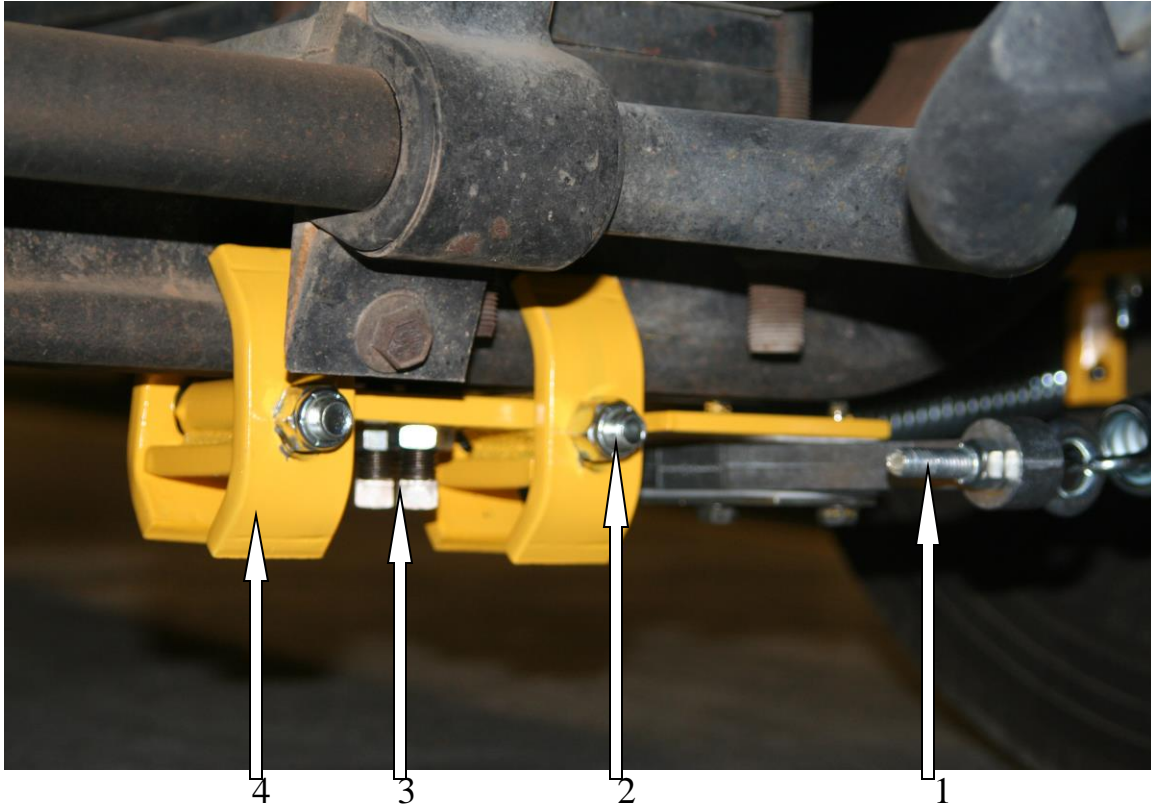

STEER SAFE, Inc.

STEER SAFE STABILIZERS

Installation Instructions

F/SUPER/2



1. Be sure and set the wheels in a straight ahead position by measuring from a point that is an equal distance from each wheel.
2. Place axle bracket on bench with fulcrum bar up. Place eyebolts in flat side of fulcrum bar and run nuts up on eyebolt finger tight. Place 1/2" set screws in tapped holes between the two blocks and make flush with other side. Turn bracket over (with fulcrum bar down). Place one (1) clamp on 1/2" x 4" bolt with long end of clamp up and insert bolt into one of the holes and place clamp on other side with long end up. Use 1/2" nut and tighten finger tight; repeat on other end.
3. Place fulcrum assembly under one end of axle with fulcrum bar down and toward wheel, hook springs in wheel bracket, then in eyebolts and swing bracket up on axle. Leave loose enough to slide on the axle, then pull bracket toward center of vehicle until springs are straight. Tighten both 1/2" nuts, making sure the clamps go over the axle flange, and then tighten set screws and lock. If the bracket is too far away from wheel to get clamps over axle flange you will need to turn the wheel bracket around (legs toward wheel).
4. Tighten eyebolts until eye is against the fulcrum bar.

1. EYE BOLT
2. 1/2 x 4" HEX BOLT
3. SET SCREW
4. CLAMP