
Fax (575) 546-0040 1-800-845-5504

## STEER SAFE, Inc.

## STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS F-SUPER Figure 1

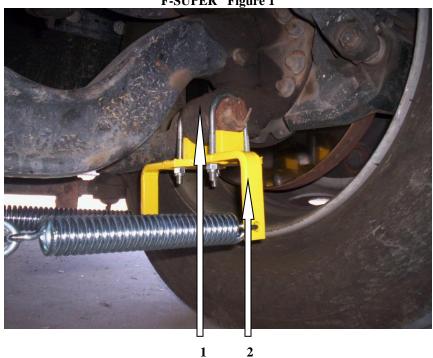

- $1.\ BE$  SURE THAT WHEELS ARE IN STRAIGHT AHEAD POSITION. EQUAL DISTANCE BOTH SIDES.
- 2. MOUNT WHEEL BRACKET ASSEMBLY UNDER THE LOWER STEERING KNUCKLE WITH ATTACHMENT LEGS DOWN AND AWAY FROM WHEEL ON 24000 & 26000 LB CHASSIS PUT LEGS TWARDS THE WHEEL. BE SURE AND BEND COTTER KEY END FROM UNDER NUT. PLACE ONE 3/8" "U" BOLT OVER NUT AND THE OTHER OVER LOWER STEERING ARM, USE 3/8" LOCK NUTS FURNISHED AND TIGHTEN. BE SURE NUTS ARE TIGHT. TIGHTEN SET SCREWS TIGHT THEN TIGHTEN JAM NUTS.
- 1. STEERING KNUCKLE
- 2. ATTACHMENT LEG