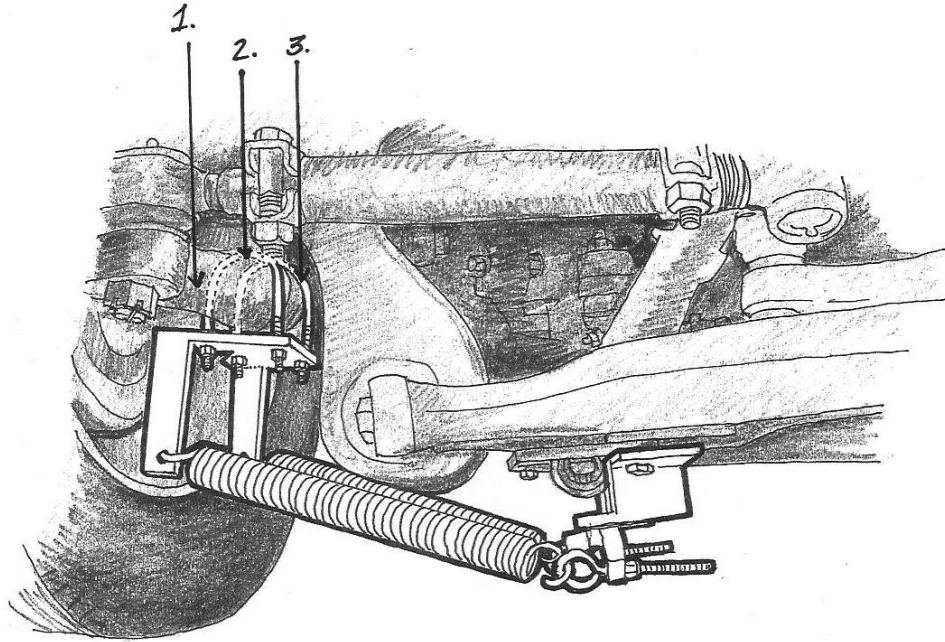

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

1460 figure 1



- 1.** BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION by measuring from a point that is an equal distance from each wheel.
- 2.** Place right handed wheel bracket (R) on the passenger side, and the left (L) on the drivers side.
- 3.** Place Notch on wheel bracket toward wheel. The small block on wheel bracket needs to be in the rear of wheel. Put the 3/8"x 2" x 4" "U" bolt around the steering arm in front and through the wheel bracket. Start nuts. Place 5/16"x 2"x 4" "U" bolt around nut in back of steering arm and in wheel bracket. Start nuts.
- 4.** Tighten the nuts on wheel bracket evenly until tight. Repeat other side.

- | | |
|--------------------------|---------------------------|
| 1. Steering Arm | 3. 5/16"x 2"x 4" "U" bolt |
| 2. 3/8"x 2"x 4" "U" bolt | |