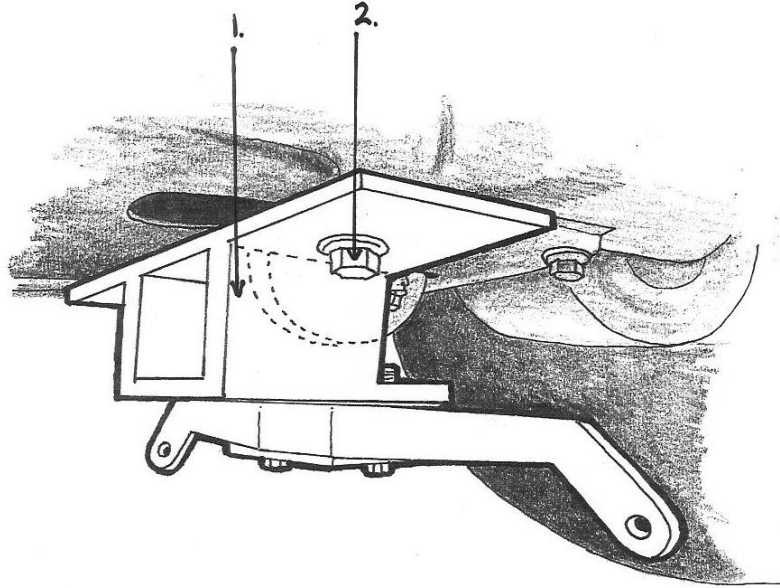

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

1460 figure 2



1. Remove the two flange bolts on each side closest to the vehicles center.
2. Take loctite that we have provided and put on two flange bolts Place the Axle bracket up to the cross member and insert the two flange bolts. Do not tighten yet.
3. Place eyebolts in fulcrum bar with eye toward wheel. Place 3/8" locknut on the eyebolts and tighten finger tight.
4. Hook up springs to the legs on the wheel bracket and into the eyebolt.
5. Remove all the slack by pulling the fulcrum assembly toward the center of vehicle making sure the fulcrum bar is resting properly on the two pivot pins.
6. Tighten flange bolts securely. Run eyebolts up until the eye is against the fulcrum bar.

1. Fulcrum assembly

2. Flange bolts

ATTN: AFTER INSTALLATION TURN WHEELS ALL THE WAY BOTH DIRECTIONS TO MAKE SURE EVERYTHING CLEARS.