

P.O. Box 149 Deming, NM 88031-0149
3330 Raymond Reed Blvd.
Airport Industrial Park


Telephone (575) 546-8894
Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

IFS 900 SG Fig.1

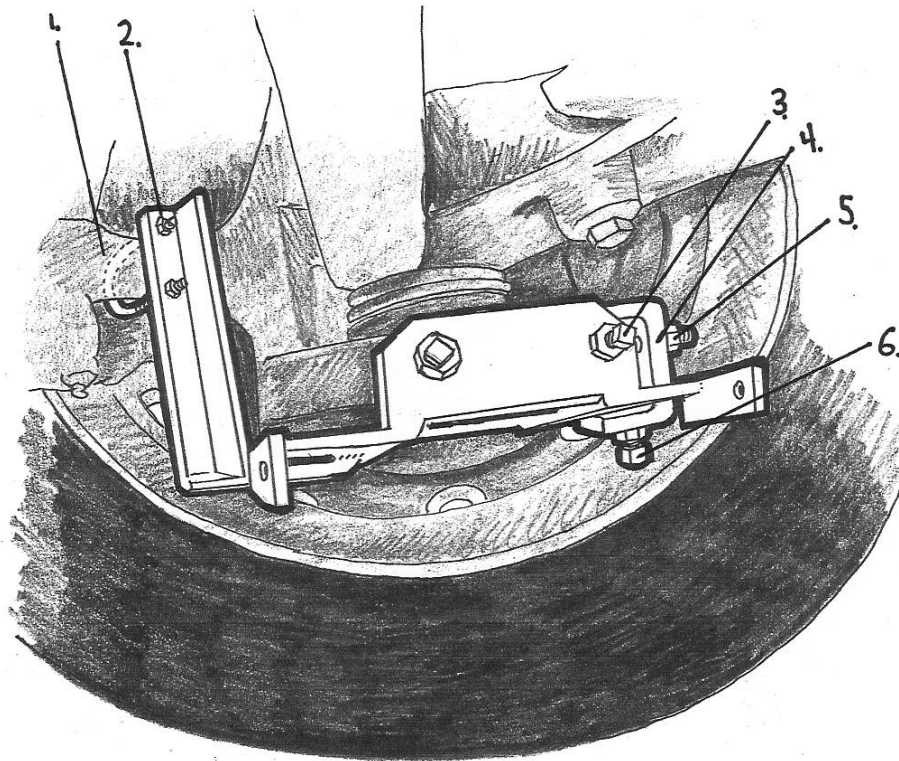

1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION BY MEASURING from a point that is an equal distance from each wheel.
2. To mount wheel bracket place wheel bracket against the bottom of boss, and inserting "U" bolt around the steering arm from backside through bracket, and start nuts.
3. Place "C" clamp on 3/8" stud with setscrew facing downward, and start nut.
4. Tighten "U" bolt around steering arm, then tighten nut on stud. Run setscrew in clamp until snug, and tighten jam nut. Tighten 1/2" setscrews until snug on the front of the bracket and tighten jam nuts. REPEAT OTHER SIDE.

- | | |
|------------------|------------------|
| 1. STEERING ARM | 2. "U" BOLT |
| 3. 1/2" SETSCREW | 4. "C" CLAMP |
| 5. 3/8" NUT | 6. 3/8" SETSCREW |