


STEER SAFE STABILIZERS
INSTALLATION INSTRUCTIONS
IFS 900 SG figure 2

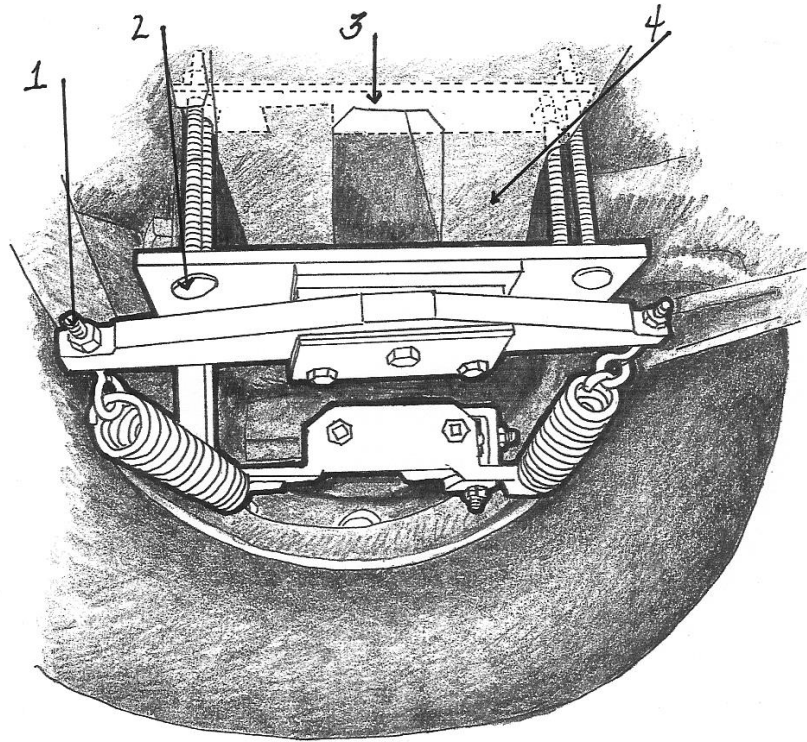

1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION BY MEASURING from a point that is an equal distance from each wheel.
2. Place carriage bolts (4) through Fulcrum assembly from side fulcrum bar is attached. Place clamp plate marked 'R' above suspension arm on right hand side. Make sure Notch is facing wheel, flat side down.
3. Place carriage bolts through clamp plate from bottom side, start nuts. Make sure flat side of fulcrum bar is facing wheel. Place eyebolts through bar with eye facing wheel.
4. Connect springs to wheel bracket and eyes on fulcrum bar (if it does not reach use lap links provided in package).
5. Pull entire fulcrum bar assembly toward center of vehicle far enough to take all the slack out of the springs. **MAKE SURE FULCRUM BAR IS RESTING CORRECTLY ON PINS** (do not try to extend springs now).
6. Tighten fulcrum assembly bolts firmly to suspension arm by tightening each bolt a little at a time.
7. Run eyebolt nuts up on fulcrum bar until eye is snug to face of fulcrum bar.

1. EYE BOLT
2. CARRIAGE BOLT
3. CLAMP PLATE
4. SUSPENSION ARM