

P.O. Box 149 Deming, NM 88031-0149
3330 Raymond Reed Blvd.
Airport Industrial Park


Telephone (575) 546-8894
Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

IHC-800-W Figure 1

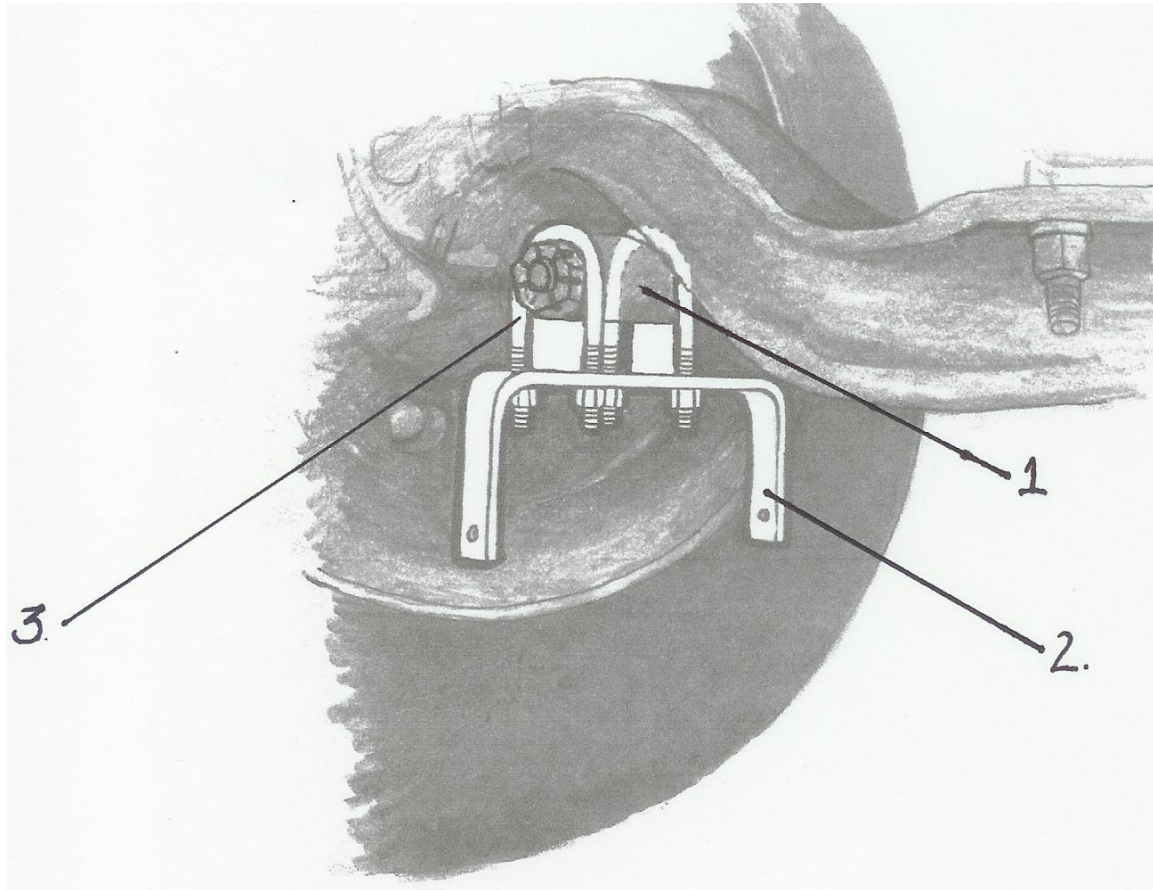

1. BE SURE THAT WHEELS ARE IN STRAIGHT AHEAD POSITION. EQUAL DISTANCE BOTH SIDES.

2. MOUNT WHEEL BRACKET ASSEMBLY UNDER THE LOWER STEERING KNUCKLE WITH ATTACHMENT LEGS DOWN AND AWAY FROM WHEEL. BE SURE AND BEND COTTER KEY END FROM UNDER NUT. PLACE ONE 3/8" "U" BOLT OVER NUT AND THE OTHER OVER LOWER STEERING ARM, USE 3/8" LOCK NUTS FURNISHED AND TIGHTEN. BE SURE NUTS ARE TIGHT.

- 1. STEERING KNUCKLE
- 2. ATTACHMENT LEG
- 3. 3/8" U-BOLT