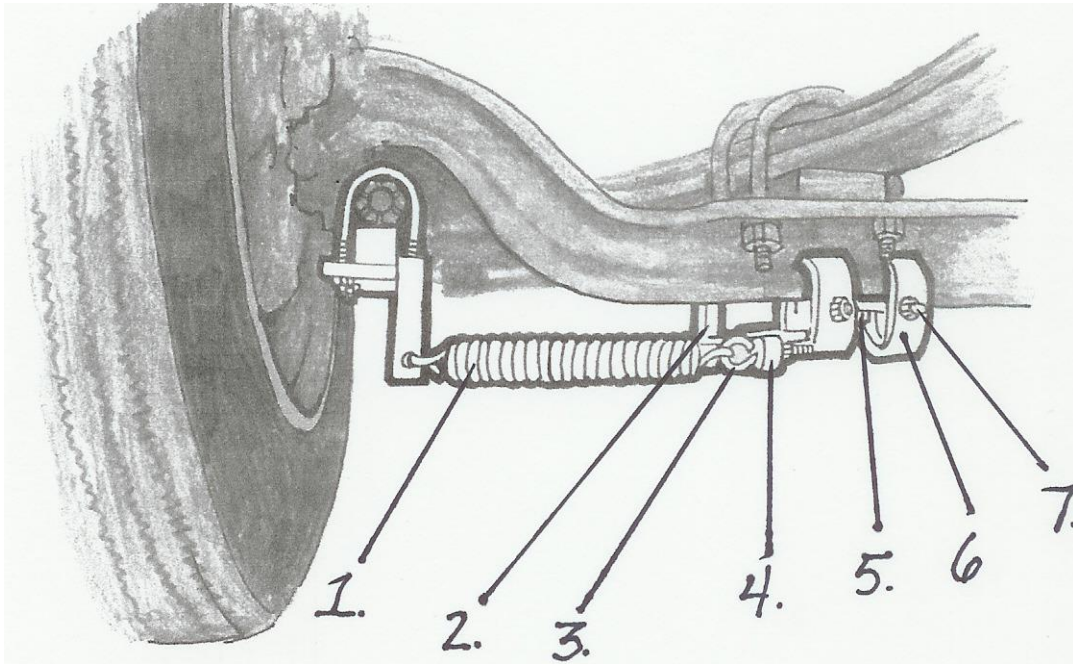

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

IHC-800-W figure 2



1. TO MOUNT FULCRUM BAR ASSEMBLY, PLACE BRACKET UNDER AXLE WITH FLAT SIDE OF FULCRUM BAR TOWARD WHEEL AND ½ X 1 ¼ X 1 ½ BLOCK AGAINST BOTTOM OF AXLE. THEN TIGHTEN ½" LOCK NUTS SUFFICIENTLY TO HOLD BRACKET IN PLACE BUT STILL ALLOW IT TO SLIDE BACK AND FORTH ON THE AXLE.

2. PUT EYEBOLTS IN FULCRUM BAR AND START NUTS ON UNTIL THEY ARE FINGERTIGHT.

3. HOOK SPRINGS IN WHEEL BRACKET FIRST, THEN IN EYEBOLTS. PULL FULCRUM BAR ASSEMBLY AWAY FROM WHEELS UNTIL SPRINGS ARE STRAIGHT. TIGHTEN ½" LOCK NUTS ON AXLE BRACKET TIGHT. TIGHTEN TWO ½" SET SCREWS AND LOCK WITH ½" JAM NUTS.

4. TIGHTEN EYEBOLTS UNTIL EYE IS AGAINST THE FULCRUM BAR. RUN THE EYEBOLT NUT ALL THE WAY UP TO THE FULCRUM BAR.

1. SPRING

2. ½" X 1 ¼" X 1 ½" BLOCK

3. EYEBOLT

4. FULCRUM BAR

5. ½" SET SCREW

6. CLAMP

7. ½" LOCKNUT