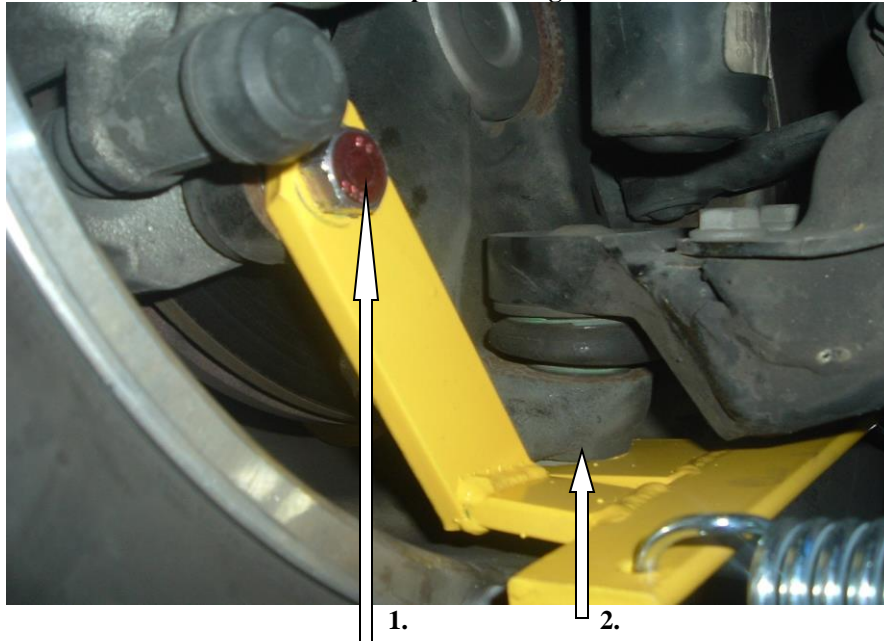

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

Mercedes Sprinter 08 figure 1



- 1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION** by measuring from a point that is an equal distance from each wheel.
- 2. Place the right hand wheel bracket marked (R)** under the passenger side and the left (L) under the drivers.
- 3. Remove lower bolt from brake caliper.**
- 4. Place the wheel bracket up to the wheel with lower ball joint nut inserted into hole**
Put loctite on 14 X 1.50 X 50 Metric bolt into caliper and tighten.

1. 14 x 1.50 x 50 Metric bolt
2. Lower ball Joint