

P.O. Box 149 Deming, NM 88031-0149
3330 Raymond Reed Blvd.
Airport Industrial Park


Telephone (575) 546-8894
Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

Mercedes Sprinter figure 1

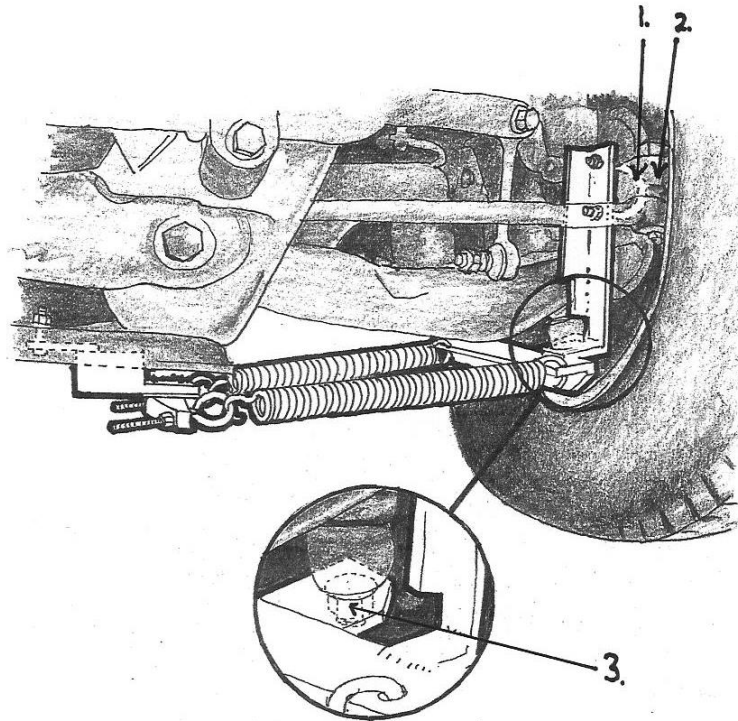

- 1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION** by measuring from a point that is an equal distance from each wheel.
- 2. Place the right hand wheel bracket marked (R)** under the passenger side and the left (L) under the drivers.
- 3. Put the 5/16" x 1 3/8" x 2" "U" bolt** around the steering arm.
- 4. Place the wheel bracket up to the wheel** with lower ball joint nut inserted into hole Put "U" bolt through wheel bracket and start nuts.
- 5. Hold wheel bracket into place while tightening.** Tighten "U" bolt evenly.

1. 5/16" x 1 3/8" x 2" "U" bolt
2. Steering Arm

3. Lower Ball Joint