


P.O. Box 149 Deming, NM 88031-0149
3330 Raymond Reed Blvd.
Airport Industrial Park

Telephone (575) 546-8894
Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

**INSTALLATION INSTRUCTIONS
MFS-081 FIGURE 1**

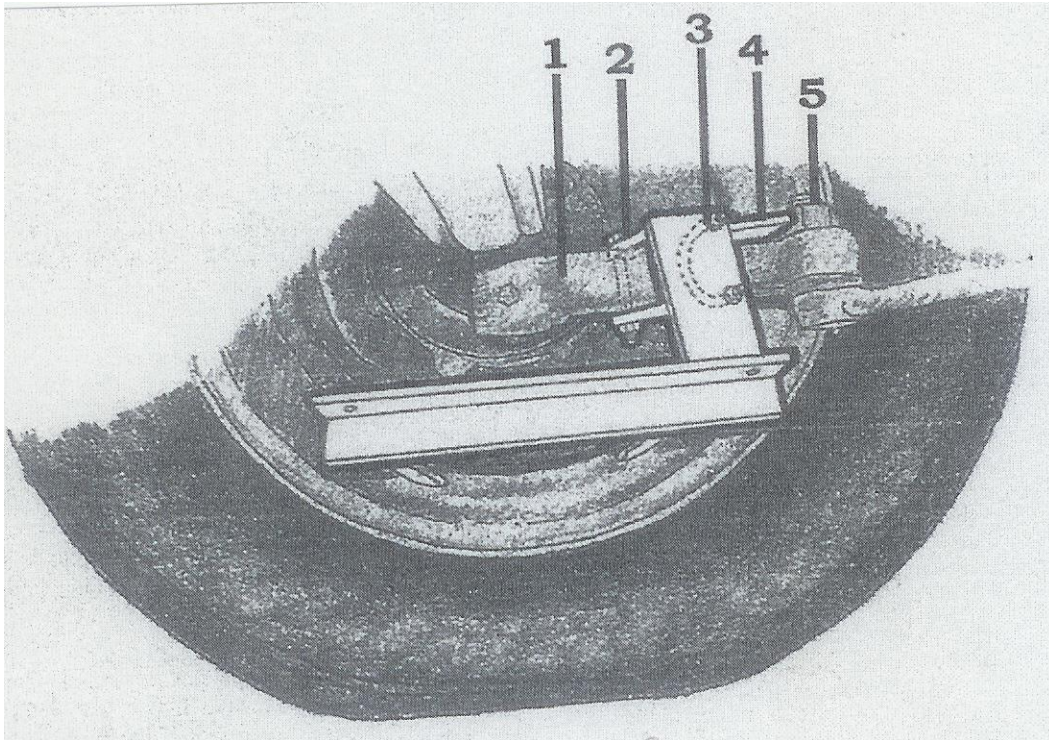

- 1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION BY MEASURING FROM A POINT THAT IS EQUAL FROM EACH WHEEL.**
- 2. PLACE RIGHT ® WHEEL BRACKET ON PASSENGER SIDE AND LEFT (L) ON DRIVERS SIDE.**
- 3. PLACE 5/16 X 1 ¾ X 3” “U” BOLT AROUND STEERING ARM.**

4. PUT WHEEL BRACKET AGAINST STEERING ARM WITH TABS “U”BOLT THROUGH HOLES AND START NUTS. PUT 3/8 – 16 X 2 3/4 HEX CAP SCREW THROUGH TABS AND START NUT.

5. WHEN TIGHTENING MAKE SURE BRACKET IS SITTING FIRMLY AGAINST STEERING ARM AND TAB ON THE BACKSIDE OF BRACKET IS PUSHED UP AGAINST NUT ON TIE ROD. TIGHTEN BOLTS AND REPEAT OTHER SIDE.

- 1. STEERING ARM**
- 2. TABS AND BOLT**
- 3. “U”**