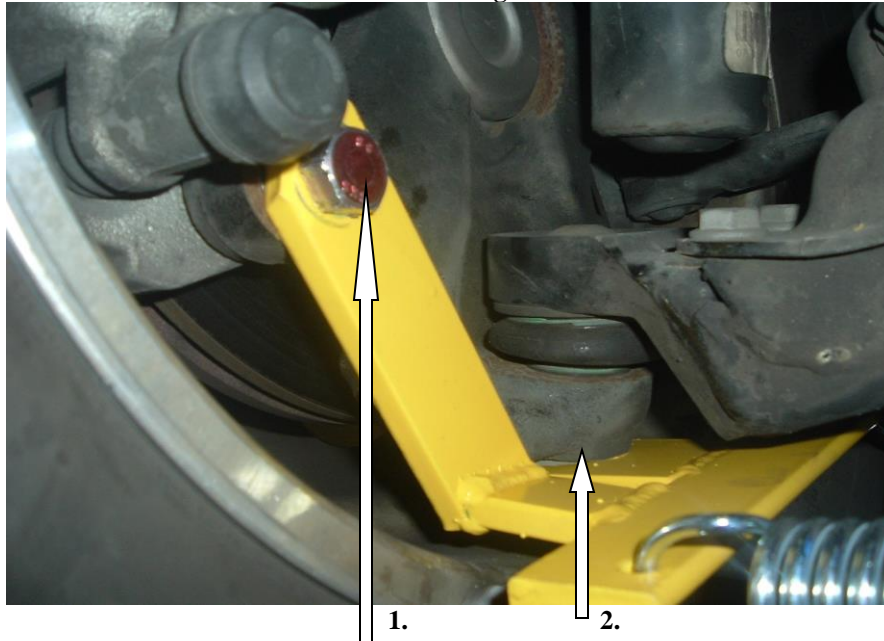

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

NC-3500-04 figure 1



- 1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION** by measuring from a point that is an equal distance from each wheel.
- 2. Place the right hand wheel bracket marked (R) under the passenger side and the left (L) under the drivers.**
- 3. Remove lower bolt from brake caliper.**
- 4. Place the wheel bracket up to the wheel with lower ball joint nut inserted into hole**
Put loctite on M16-2.0x50. Place Metric bolt into caliper and tighten.

1. M16-2.0x50 Metric bolt
2. Lower ball Joint