

---


**STEER SAFE, Inc.**

---

## **STEER SAFE STABILIZERS**

### **INSTALLATION INSTRUCTIONS**

#### **NC-800-97UD figure 1**

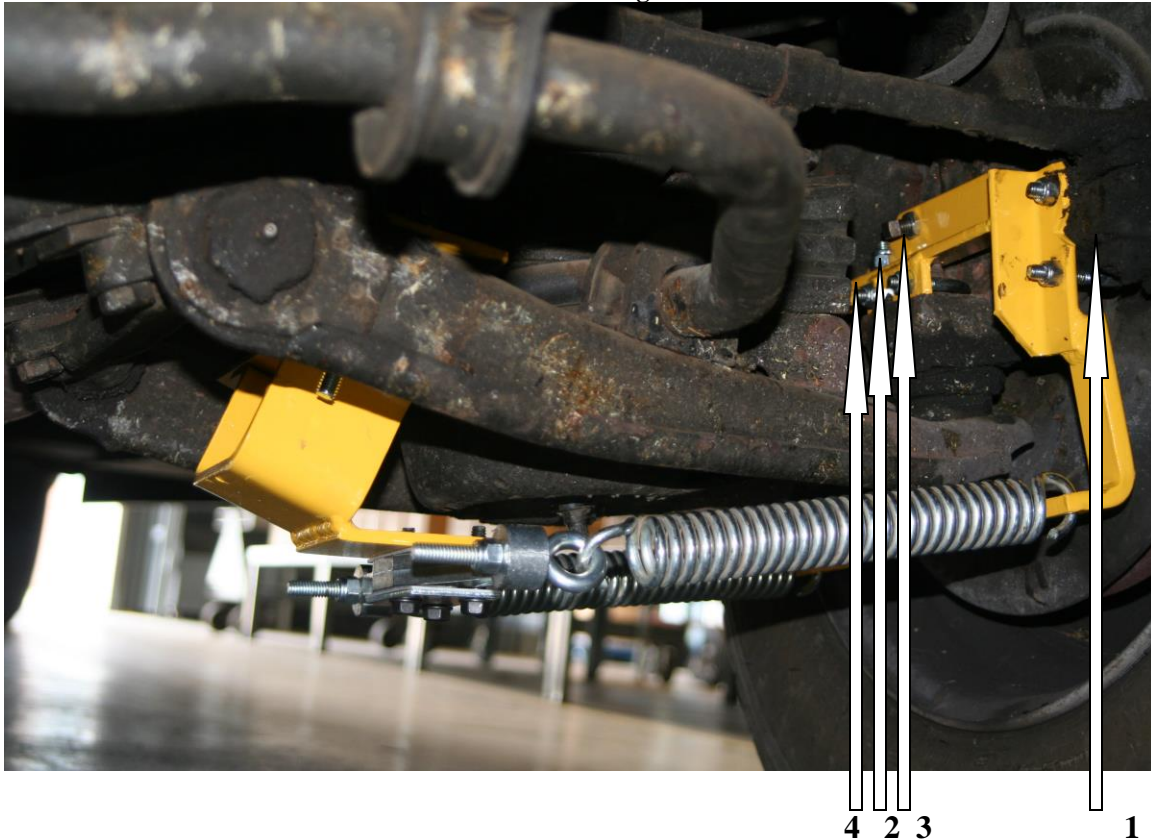

- 1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION** by measuring from a point that is an equal distance from each wheel.
- 2. Place right handed wheel bracket (R)** on the passenger side, and the left (L) on the drivers side.
- 3. Remove U-Bolt that goes around steering arm and J-Hook on rear end of 1-1/2 angle.** Leave U-Bolt in center of wheel bracket. Back off set screw till flush with back of angle iron.
- 4. With spring holes down and pointing toward center of vehicle, place U-bolt over nut and center hole on threaded pilot on lower ball joint. U-BOLT PLATE SHOULD REST ON STEERING KNUCLE. (IF COTTER PIN ENDS ENTERFERE BEND OUT OF WAY SO U-BOLT WILL GO DOWN ON NUT.)**

Push wheel bracket legs toward wheel till straight up and down, run up set screw finger tight to hold wheel bracket in place and lock jam nut.

5. Place U-BOLT around behind steering arm and through holes in angle iron.
6. Place J-HOOK in place and start nut. Be sure short end of J-Hook is behind steering arm
7. Tighten nuts on center U-Bolt tight holding U-bolt down around nut.
8. Tighten nuts on U-Bolt around steering arm tight.
9. Snug up J-Hook do not over tighten.

1. Steering Arm
2. J-HOOK
3. SET SCREW
4. CENTER U-BOLT