

P.O. Box 149 Deming, NM 88031-0149
3330 Raymond Reed Blvd.
Airport Industrial Park


Telephone (575) 546-8894
Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

ZF-IFS figure 1

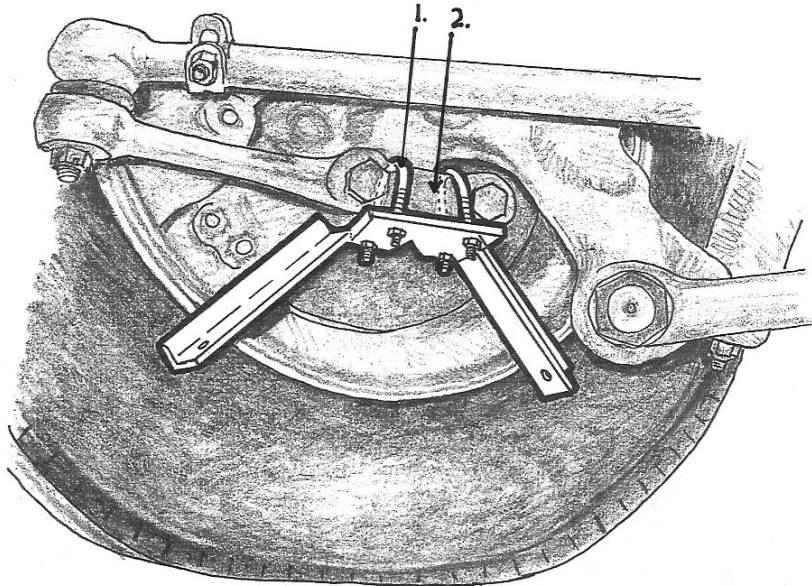

1. BE SURE WHEELS ARE IN A STRAIGHT AHEAD POSITION by measuring from a point that is an equal distance from each wheel.
 2. Put 3 ½" x 2" "U" bolts (2) around steering arm (You may have to turn the wheels in order to get the rear "U" bolt around arm, make sure to remeasure and straighten your wheels).
 3. Put the "U" bolts through the wheel bracket and tighten.
- **WHEN YOU TIGHTEN NUTS HOLD LEGS ABOUT AN INCH FROM THE TIRE. MAKE SURE BRACKET IS CLEARING THE BOSS.**

1. 3 ½" x 2" "U" bolt
2. Steering arm