

P.O. Box 149 Deming, NM 88031-0149
Telephone (575) 546-8894
3330 Raymond Reed Blvd.
Airport Industrial Park


Fax (575) 546-0040
1-800-845-5504

STEER SAFE, Inc.

STEER SAFE STABILIZERS

INSTALLATION INSTRUCTIONS

E-350-92 Figure 1

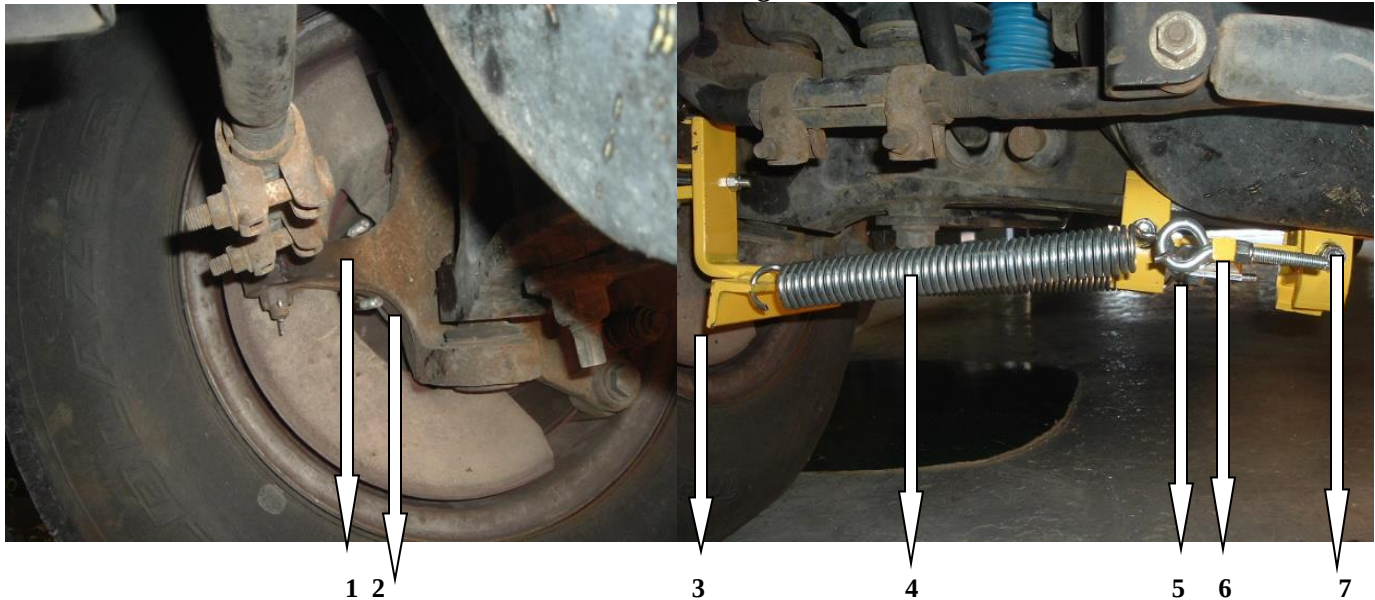

- 1. BE SURE THAT WHEELS ARE IN STRAIGHT AHEAD POSITION. EQUAL DISTANCE BOTH SIDES.**
- 2. PLACE RIGHT AND LEFT WHEEL BRACKETS ON PROPER SIDES. LEFT SIDE IS DRIVERS SIDE.**
- 3. PLACE “U” BOLT ON STEERING ARM, THEN PLACE WHEEL BRACKET ON U-BOLT AND RUN NUTS UP SNUG.**
- 4. SNUG LOWER SET SCREW THEN SNUG TOP SET SCREW, THIS IS TO HOLD BRACKET IN PLACE. TIGHTEN SET SCREWS TIGHT AND TIGHTEN JAM NUTS TIGHT. TIGHTEN U-BOLT TIGHT. FRONT END OF LEFT WHEEL BRACKET WILL BE FARTHER FROM THE WHEEL THEN THE FRONT END RIGHT SIDE BECAUSE OF DIFFERENCE IN ANGLES OF AXLES.**
- 5. INSERT EYEBOLTS IN FULCRUM BAR WITH NUTS ONLY FINGER TIGHT. MOUNT CLAMPS ON FULCRUM BAR ASSEMBLY WITH LONG END OF CLAMPS UP USING ½**

INCH BOLTS PROVIDED.

- 6. TO MOUNT AXLE BRACKET AND FULCRUM BAR ASSEMBLY PLACE BRACKET UNDER AXEL WITH FLAT SIDE OF FULCRUM BAR TOWARDS WHEEL. TIGHTEN ½” LOCK-NUTS SUFFICIENTLY TO HOLD BRACKET IN PLACE BUT STILL ALLOW IT TO SLIDE BACK AND FORTH ON AXLE.**
- 7. HOOK SPRING IN WHEEL BRACKET FIRST AND THEN IN EYEBOLTS. PULL FULCRUM BAR ASSEMBLY AWAY FROM WHEELS UNTIL SPRINGS ARE STRAIGHT. TIGHTEN ½” LOCKNUTS TIGHT. TIGHTEN EYEBOLTS UNTIL EYES ARE AGAINST FULCRUM BAR.**
 - 1. U-BOLT**
 - 2. STEERING ARM**
 - 3. SET SCREW**
 - 4. SPRING**
 - 5. EYEBOLT**
 - 6. FULCRUM BAR**
 - 7. CLAMP**